



LEVEL ACCESS CUSTOM MADE FORMERS


We can manufacture a custom size tray to suit your requirements within 5-7 working days, a particularly helpful service for our regular installers and contractors. We provide technical advice and assistance for new customers unfamiliar with formers and their installation.

Sometimes when the floorboards are removed and you are ready to install a new former, there can be many obstacles in the way, such as central heating pipes, water pipes, gas pipes, change of direction of joists, etc., and calling a tradesman in to redirect pipes can add a lot of unnecessary expense to the job. Our specialists are used to these kinds of problems and we can discuss your situation and usually find a solution.

All we need are a few dimensions:


- A = Length of tray
- B = Width of tray
- C = Centre of waste from width edge
- D = Centre of waste from length of tray edge

Rebated edge: if a rebated edge is required, write an R on the appropriate edge. (See example)

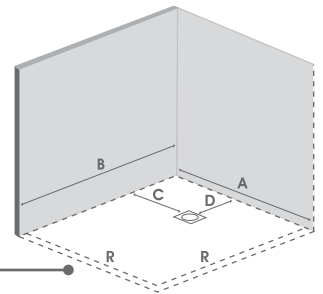

Another option we offer is a level area within the tray.

For example if the required size is 900mm square and there is a 90mm gap to the centre of the next joist, add another 90mm to the size of the tray. Indicate on the drawing where the level area is required. (See example)

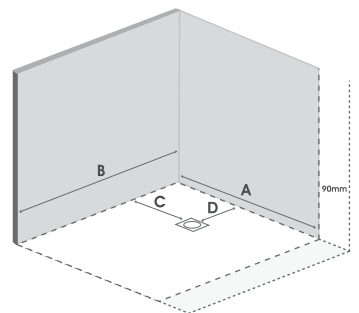

LEVEL ACCESS CUSTOM MADE FORMERS

Code	Up to width	Up to length
OTL LA35	1200mm	1200mm
OTL LA50	1800mm	900mm
OTL LA75	1800mm	1800mm

